


Hive Assembly

Brood Body or Super

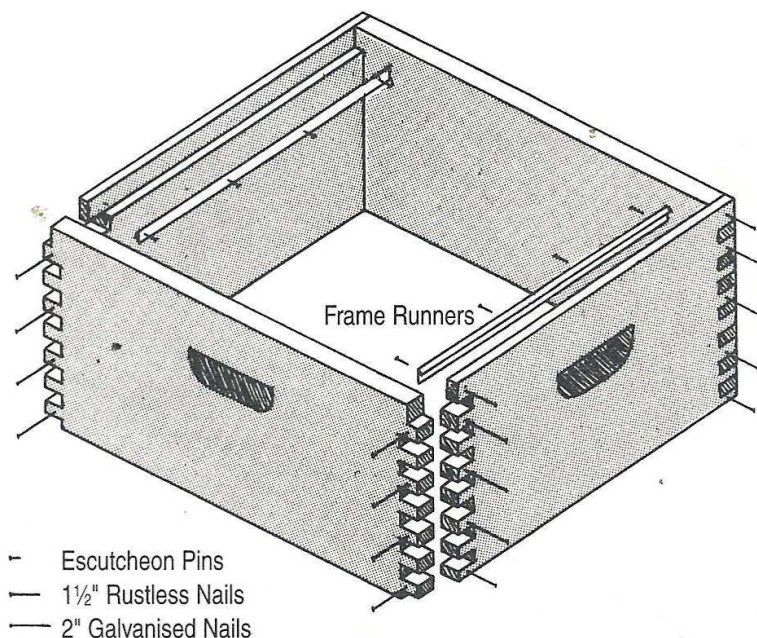


1. Bradawl the runners to prevent splitting. Nail the runners centrally to the rebated sides, using brass escutcheon pins.
2. Push the four walls together, handles on the outside and hammer the joints home. (Protect the timber by using a wooden block)
3. Nail the sides together, using 2" nails for the main joints and 1.5" nails for the top joint where the timber is narrower because of the rebate. It is advantageous to place the nails at the back of the joint and leaning slightly away from the corner, thus preventing splitting of the timber..

Use a PVA glue when assembling

Note: Nucleus hive brood bodies are identical in construction but differ in width.

Check regularly that the box is square.

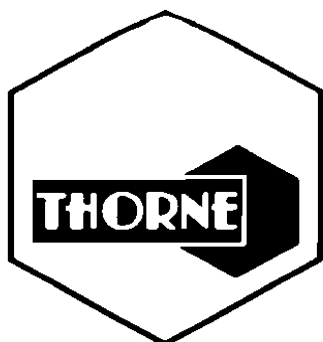

E.H. Thorne (Beehives) Ltd

Beehive Business Park, Rand, Nr Wragby, Market Rasen, Lincs, LN8 5NJ

Tel: 01673 858555 Fax: 01673 857004 e-mail: sales@thorne.co.uk